



Apply
with brush

PRODUCT DESCRIPTION

Deck Cleaner is a varnish-free and paint-free cleaner to be used for worn old exterior wooden surfaces. It is used to restore green and black surfaces to look like new again, quick and effective cleaning.



Stir

RECOMMENDED USES

For outdoor furniture and garden furniture, which is free from paint and varnish and can be used to clean any type of wood surface that is darkened.



Store in cool
place

PRODUCT SPECIFICATIONS

Product Type	: Water Based
Specific Gravity (kg/L)	: 1,00 ± 0,02
Cleaning capacity (m ² /L)	: 8 - 10

SURFACE PREPARATION

The application surface must be free from paint and varnish.



Protect from
freezing

APPLICATION

Product is ready for use. Does not require thinning.
Before usage, check homogeneity and stir well.
Pour the product on wood surface with a medium brush spread by brushing.
After waiting for at least 3 hours, wash the surface by brushing it with water.
With 1 L of product, 8-10 m² of surface can be cleaned. (The amount to be spent may vary according to the absorbency of the wood, laying pattern and state of pollution.)
If the wood surface is extremely dirty and blackened, repeat the same process one more time.
If another product application is to be made after cleaning process, wait 24 hours for the surface to dry

STORAGE & HANDLING

Store in a dry, cool place, keep away from direct sunlight.
Close tightly all containers after use.

HEALTH & SAFETY

1. For full Health and Safety information please refer to Material Safety Data Sheet (MSDS).
2. Gloves and suitable protective equipment must be worn while using these products.
3. Good ventilation must be provided in the working environment.

WARNING

Recommended temperature conditions for surface and product is between 15-25°C and relative humidity is below 50-70% during application and drying.

TRANSPORT INFORMATION

Packaging : 5 LT